
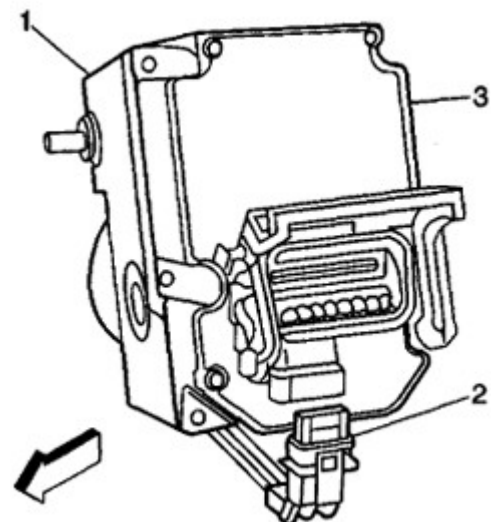


2000-2007**Removal Procedure**

1. Turn OFF the ignition.
2. Raise the vehicle. Refer to Vehicle Lifting.
3. Remove the left front wheel.
4. Remove the left front fascia extension.
Important: The area around the electronic brake control module (EBCM) must be free from loose dirt to prevent contamination of disassembled ABS components.
5. Thoroughly clean all of the contaminants from and around the EBCM assembly.
6. Rotate the EBCM connector tab up to the unlocked position.
7. See module image (upper right). Remove the EBCM connector position assurance (2) from the EBCM electrical connector (1). Notice: To prevent equipment damage, never connect or disconnect the wiring harness connection from the EBCM with the ignition switch in the ON position.
8. See module image (upper right). Disconnect the EBCM electrical connector (1) from the EBCM (4).
9. See module image (lower right). Disconnect the brake pressure modulator valve (BPMV) electrical connector (2) from the EBCM (3).

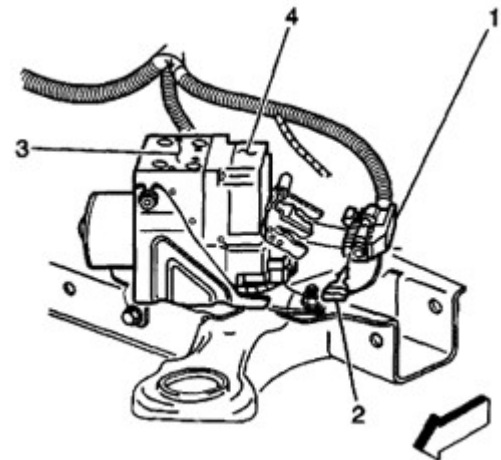

ABS Module Removal & Installation Instructions

Buick LeSabre

ModuleMaster


Support: 208-892-0764

www.modulemaster.com

10. See image (upper right). Remove the 6 EBCM to BPMV screws (2).

11. Clean the surface of the EBCM/BPMV assembly.

12. See image (lower right). Separate the EBCM (2) from the BPMV (1).

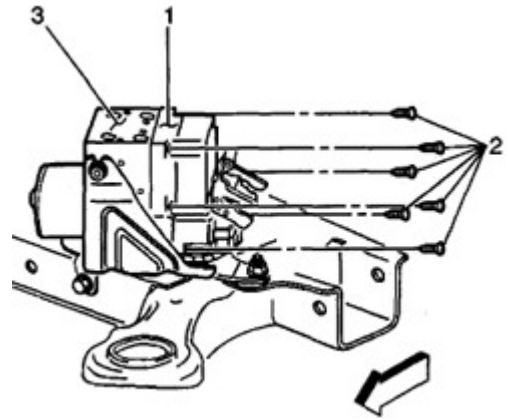

Installation Procedure

1. Installation is the reverse of the above steps.
2. Start engine and make sure the brake warning lights go out.

2008 and later vehicles

Unfortunately, we cannot repair ABS modules for these vehicles yet.

